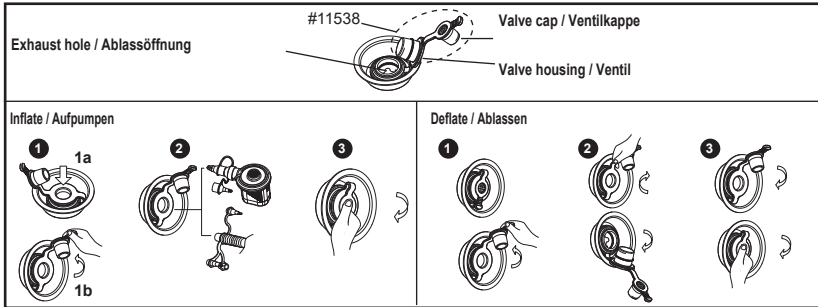


**Inflate**

- 1a. Separate valve cap from valve housing and press valve housing firmly into exhaust hole.
- 1b. If valve housing already inserted inside exhaust hole, pull valve cap to open.
2. Insert pump hose or nozzle.
CAUTION: To prevent bursting, do not use a high pressure pump such as an air compressor.
3. Replace cap securely.

Deflate

1. Pull out valve cap.
2. Pull inflation valve housing to release air.
3. Replace inflation valve housing and cap securely.

Aufpumpen

- 1a. Nehmen Sie die Ventilkappe vom Ventil ab und drücken Sie das Ventil fest in die Ablassöffnung.
- 1b. Falls das Ventil bereits in die Ablassöffnung gesteckt ist, ziehen Sie die Ventilkappe ab, um es zu öffnen.
2. Stecken Sie die Luftpumpe bzw. die Düse ins Aufblasventil.

ACHTUNG: Um ein Platzen zu vermeiden, verwenden Sie keine Hochdruckpumpe, wie z.B. einen Kompressor.

3. Setzen Sie die Kappe wieder fest auf.

Ablassen

1. Ziehen Sie die Ventilkappe heraus.
2. Ziehen Sie das Ventil heraus, um Luft abzulassen.
3. Setzen Sie das Ventil wieder ein und Kappe fest auf.



©2025 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.
 ®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/ Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Eitenseweg 46, 4706 PB Roosendaal - The Netherlands • Distributed in the UK by Unitex Service (UK) Limited, 124 City Road, London, England, EC1V 2NX, UK.
 www.intexcorp.com

INTEX®

186-***-R0-2605